


Installation Instructions: White Puck GPS Receiver

To connect this receiver to an Autometer GPS speedometer you will need the small 3 prong weather tight connector that snaps into the back of the speedometer (*part# GPS-250*). This plug is included in the speedometer kit. If this plug is not present, please contact a DMP representative.

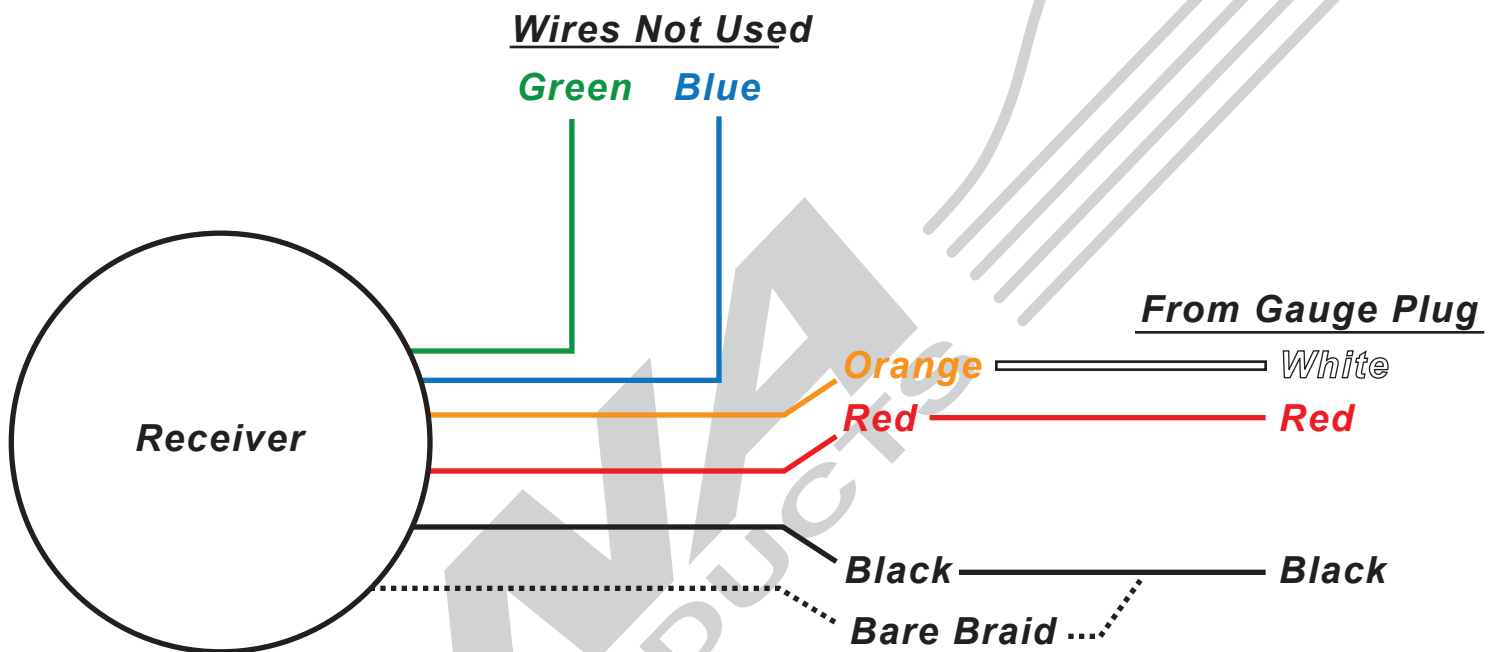

CAUTION: Please read the following instructions

- The **RED** wire from the gauge plug is delivering 12 volts to the receiver, DO NOT attempt to apply power to that wire. This could result in GPS failure and a voided warranty.
- The **BLACK** wire from the gauge plug is delivering ground to the receiver. It is NOT necessary to connect this wire to a ground.
- The **WHITE** wire from the gauge plug is the signal wire from the receiver to the gauge. DO NOT touch this wire to power, it will damage the gauge.
- Antenna must be mounted in clear view of satellites.